

## Assembly Instructions


For more information, contact us at: sales@pinecrafter.com

## Slat Kit




Scan Here

for 109, 110 Assembly Animation

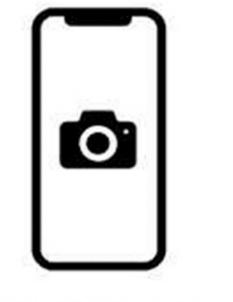

OPEN YOUR


CAMERA

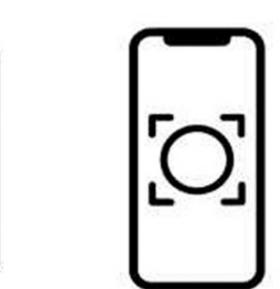

AIM IT AT THE QR CODE




**BANNER** 

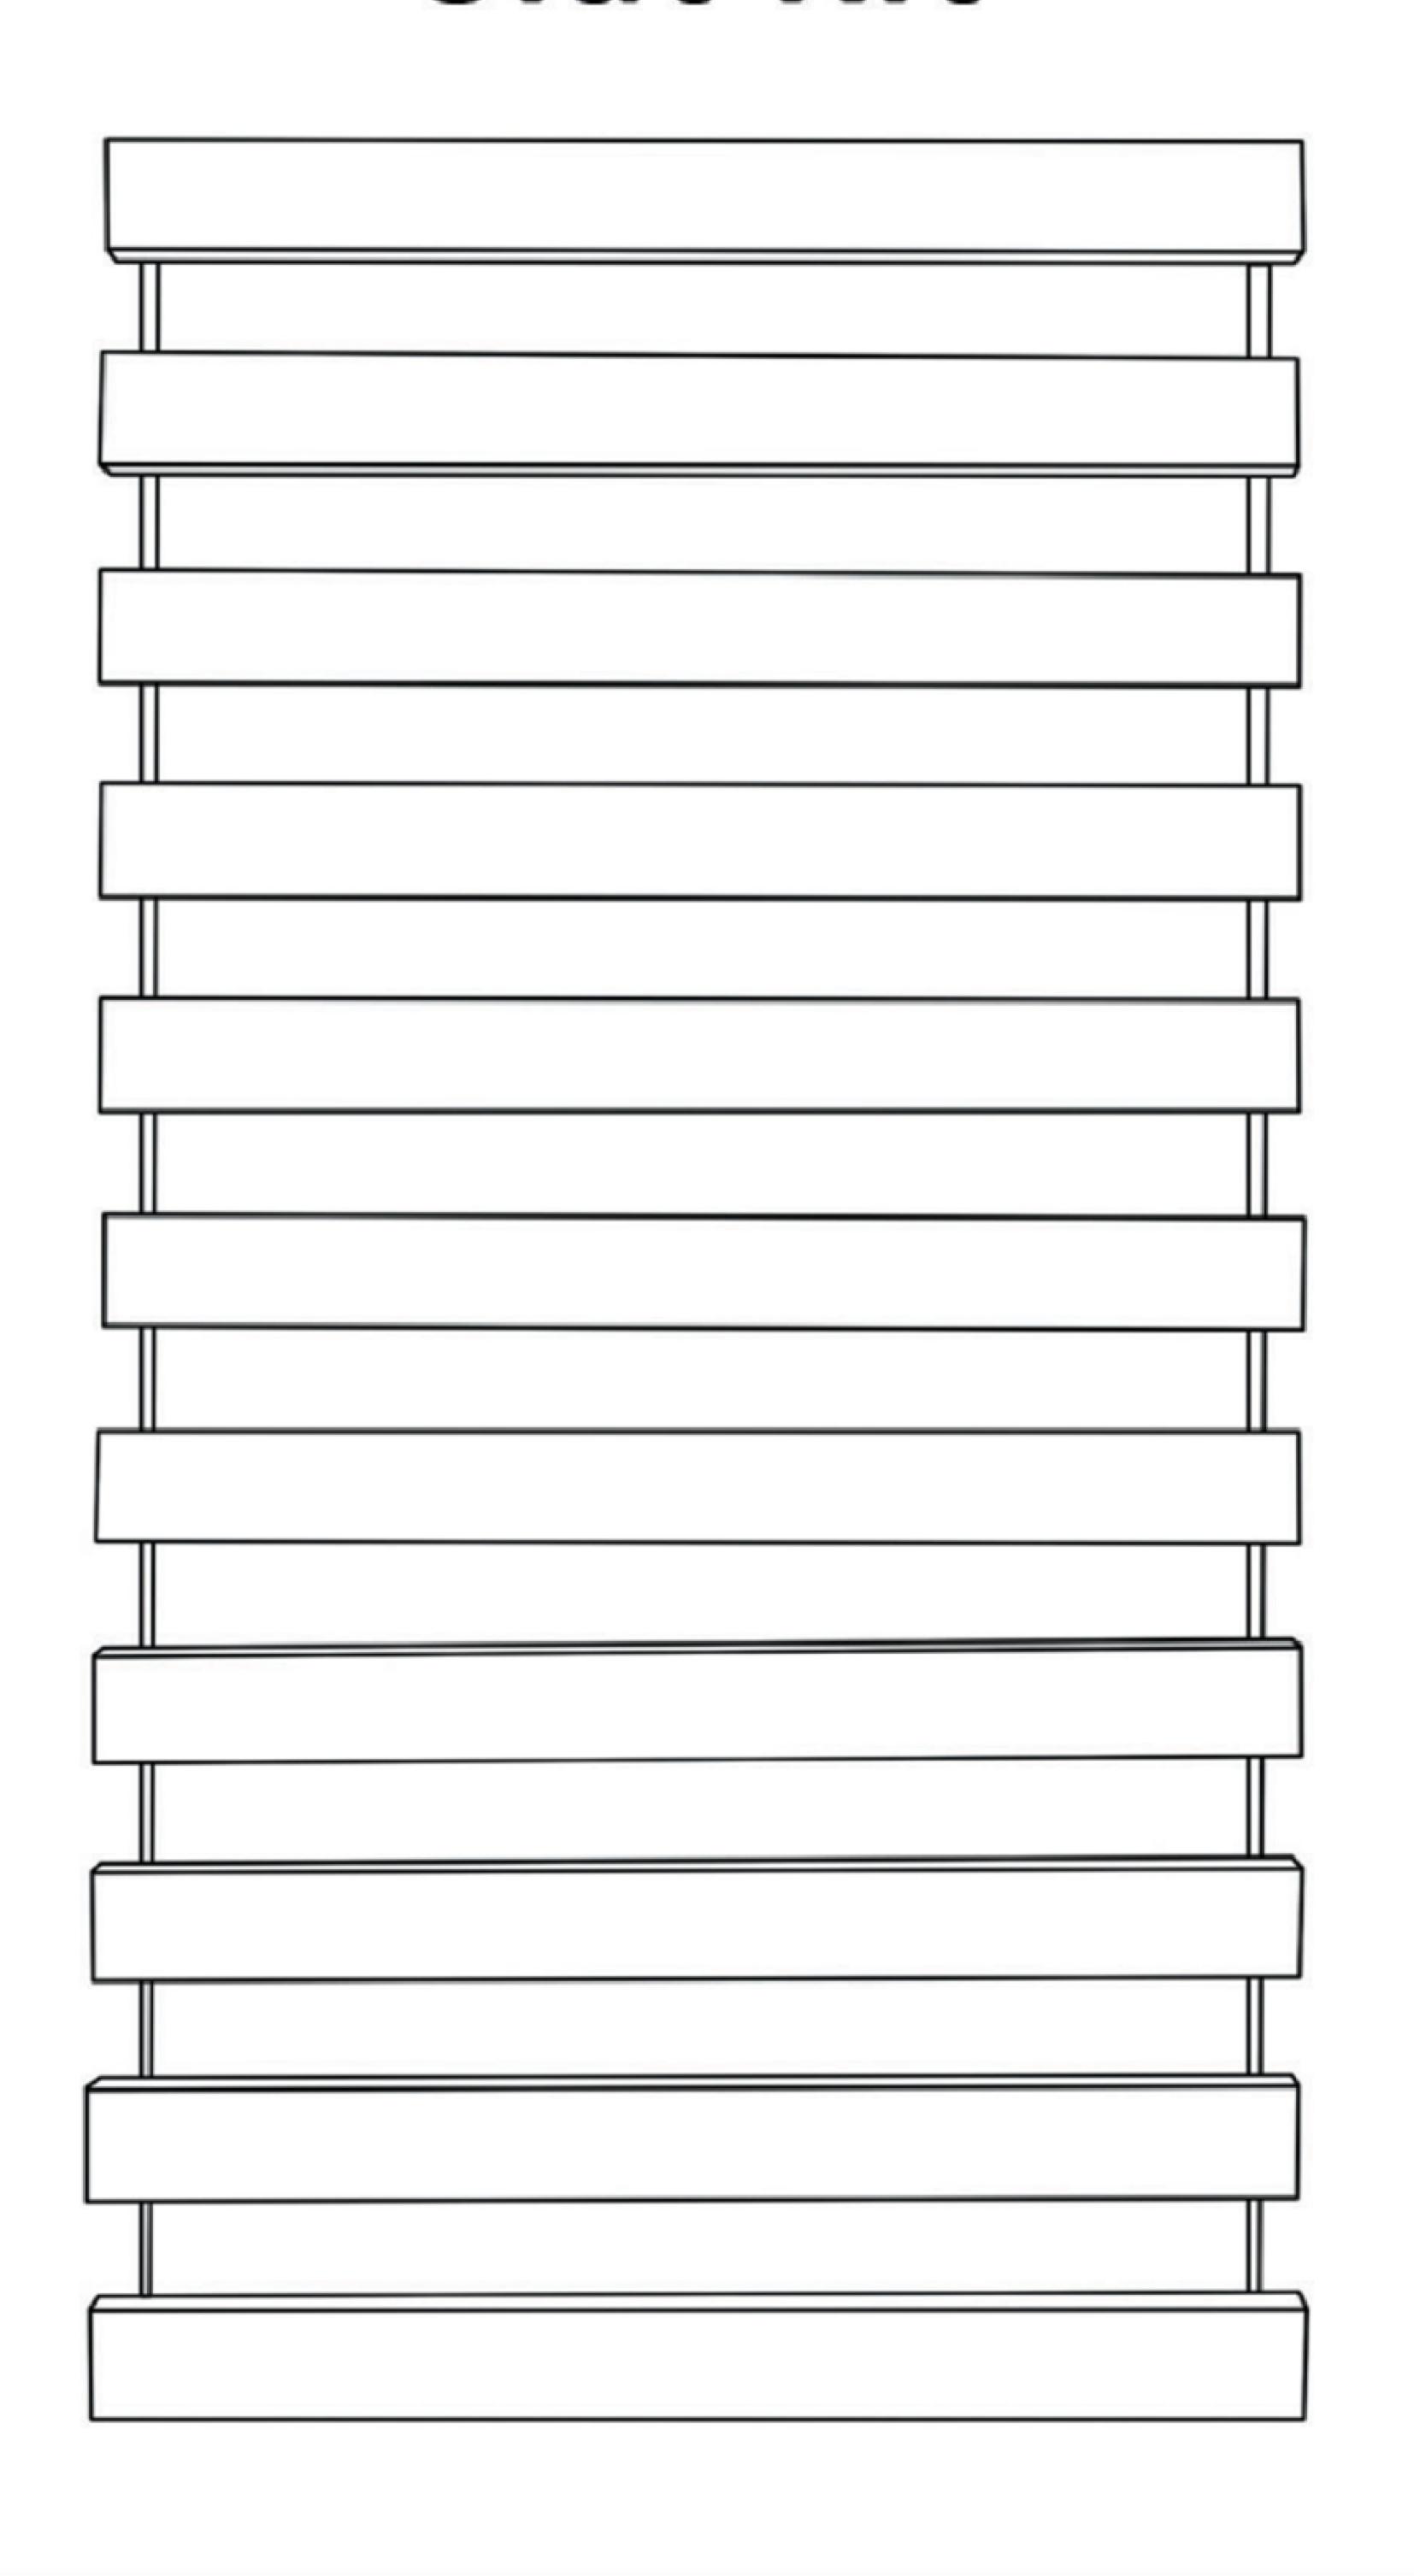



Scan Here


for 109XL, 110XL Assembly Animation

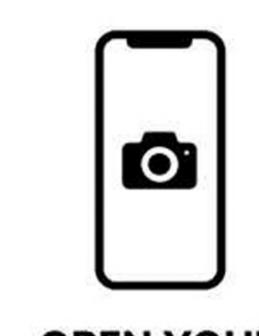


OPEN YOUR CAMERA



AIM IT AT THE QR CODE

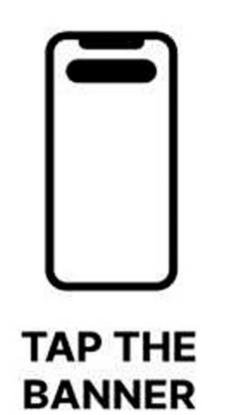


## PARTS & HARDWARE

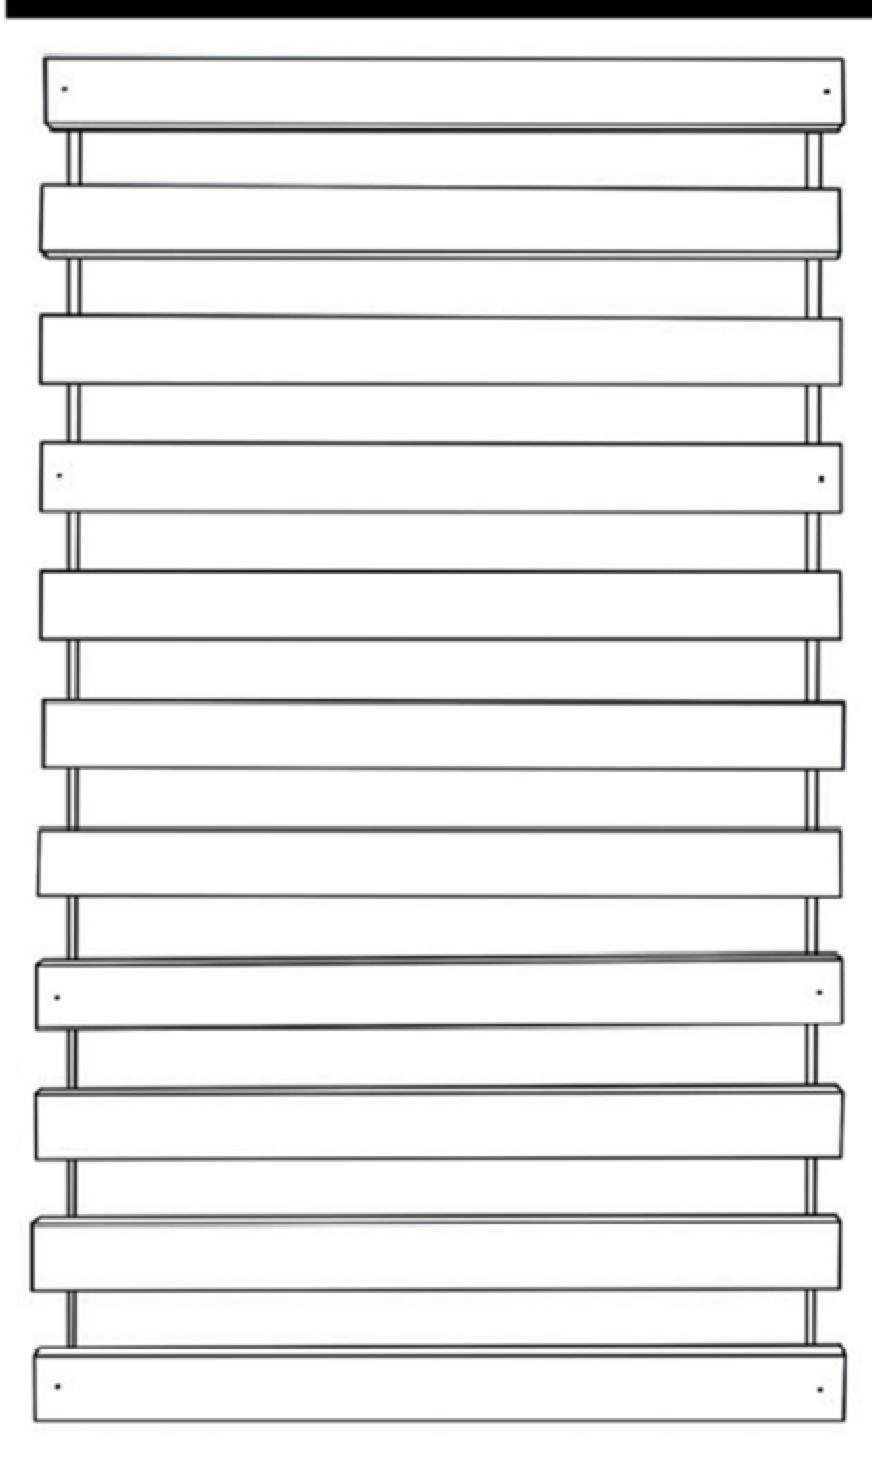

Screws x8

## Tools Required for Assembly

Phillips Screwdriver

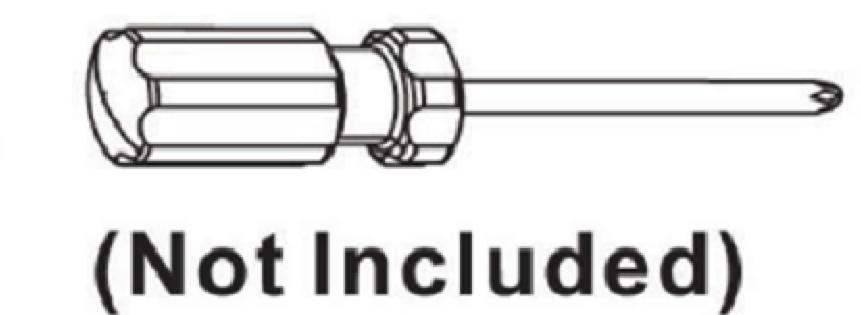



2 PERSON RECOMMENDED

NOTE: If using slat kit with upper bunk bed, you will not have to use the metal safety wires as long as you secure the slat kit to the wood cleats on each rail.

